

# Application Note

## Using AN-X-DCSNet with the Wonderware ABCIP DAServer




This application note describes how to configure the Wonderware DAServer to access DCSNet data on the AN-X-DCSNet module.

Install the ABCIP DAServer supplied by Wonderware. Accept all default settings. It requires InTouch 7.1 or greater.

Run "Start -> Programs -> Wonderware -> System Management Console"

Use the following steps to configure it to access data on the AN-X-DCSNet.

Step 1:

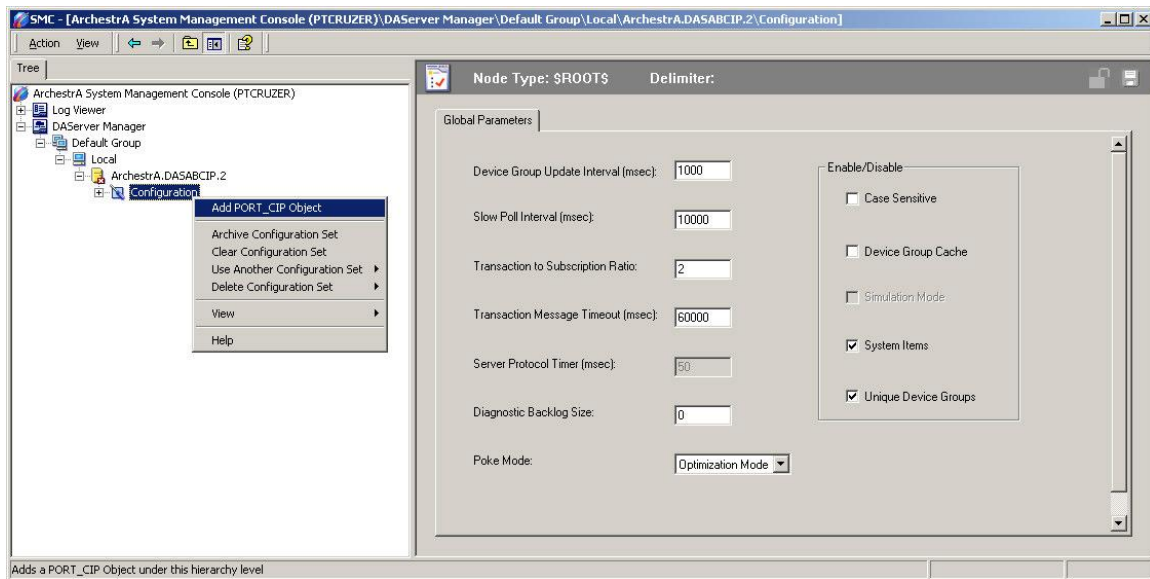

Quest Technical Solutions

4110 Mourning Dove Court

Melbourne FL 32934


321 757-8483

www.qtsi.biz




# Using AN-X-DCSNet with the Wonderware ABCIP DAServer

## Step 2:

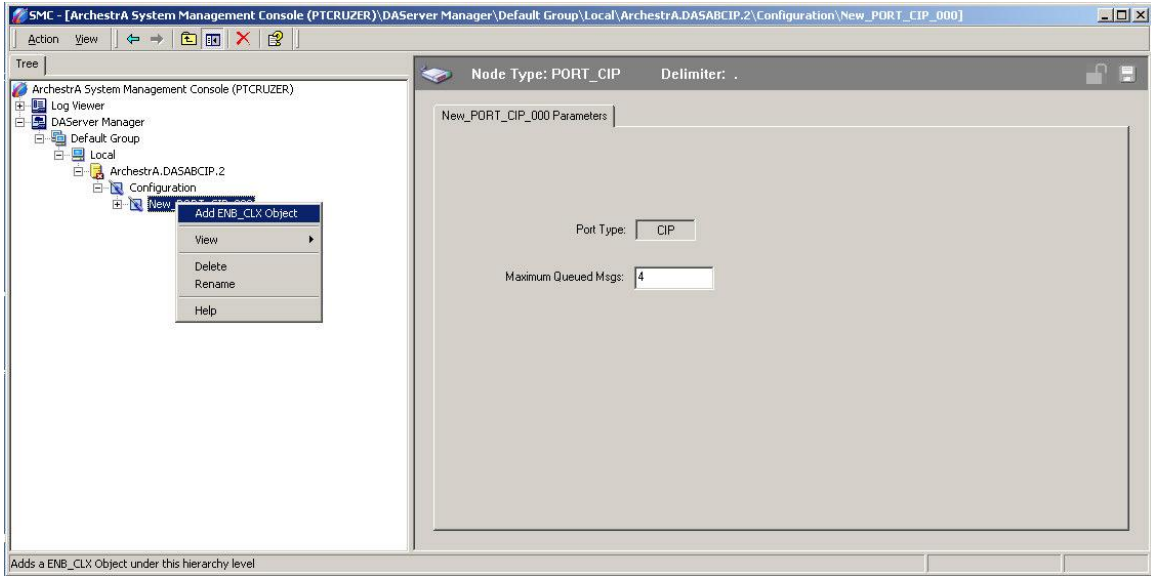


## Step 3:

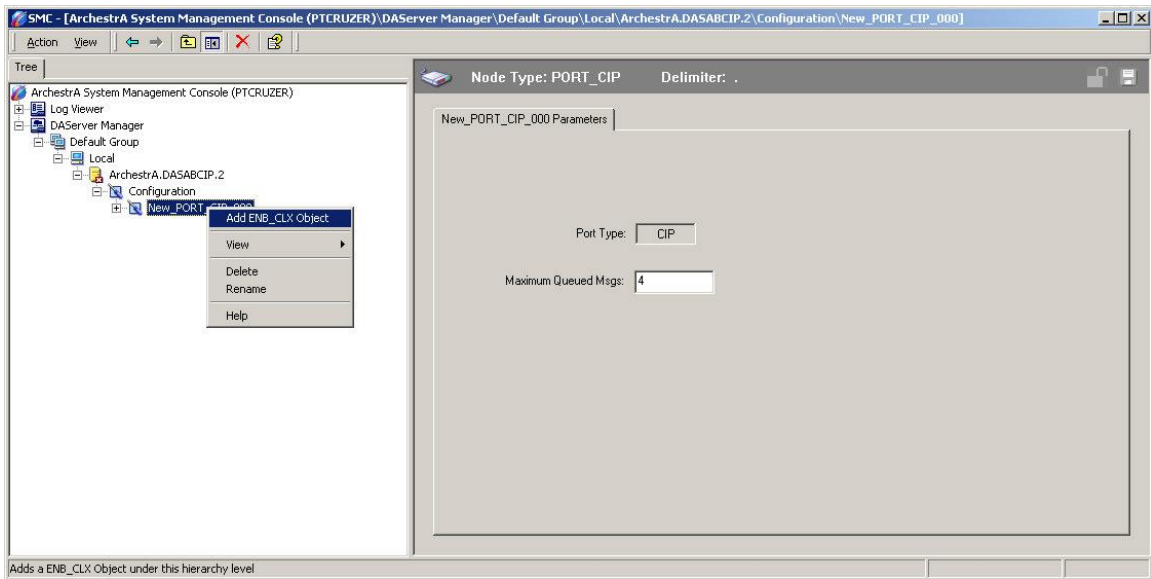


# Using AN-X-DCSNet with the Wonderware ABCIP DAServer

## Step 4:

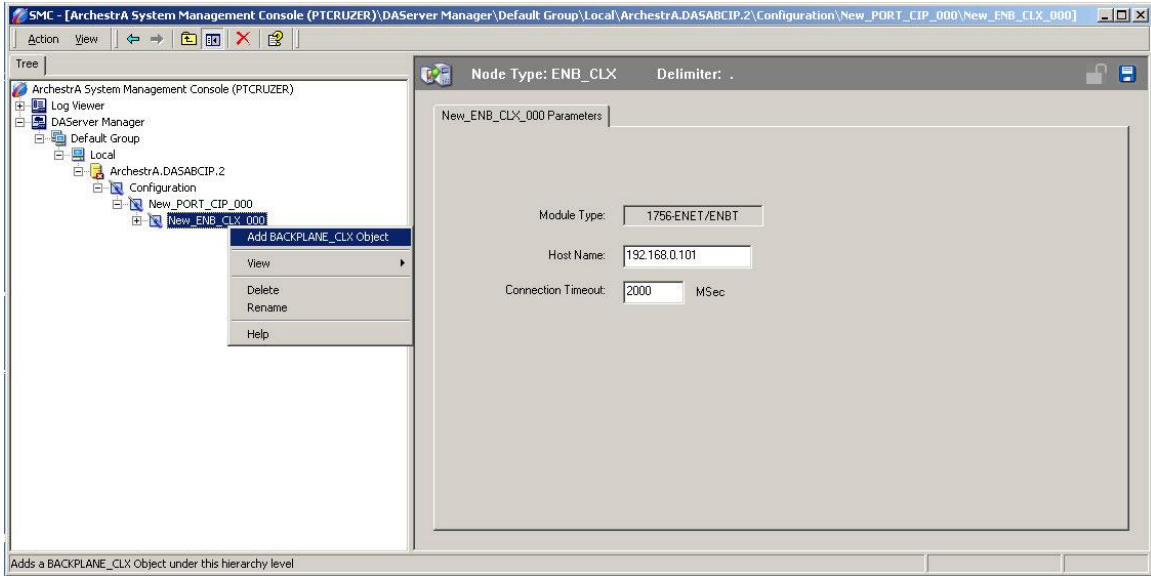


## Step 5:

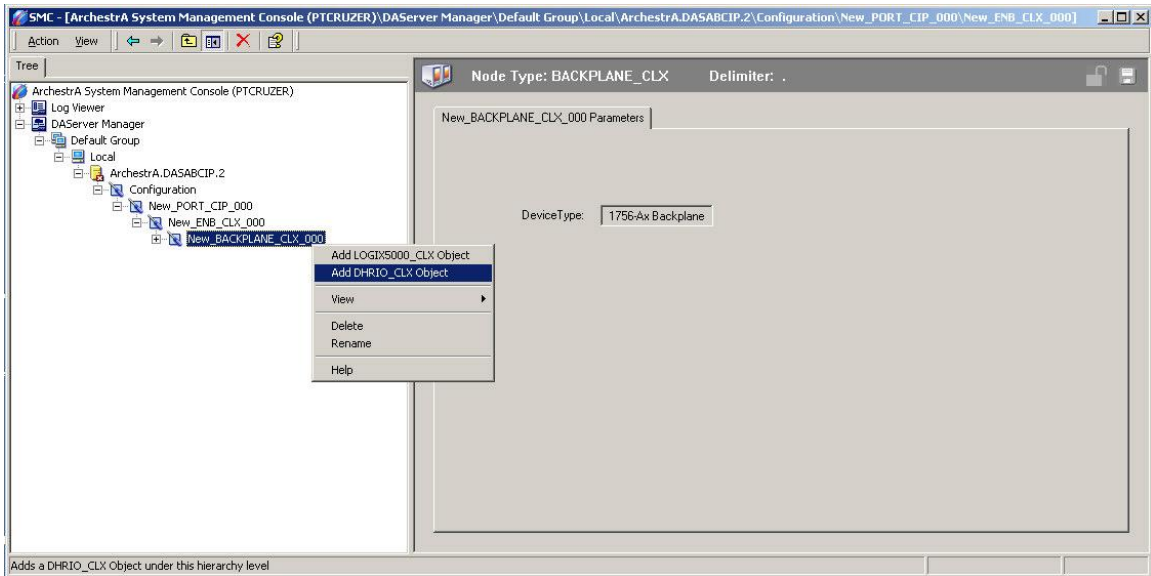


# Using AN-X-DCSNet with the Wonderware ABCIP DAServer

## Step 6:

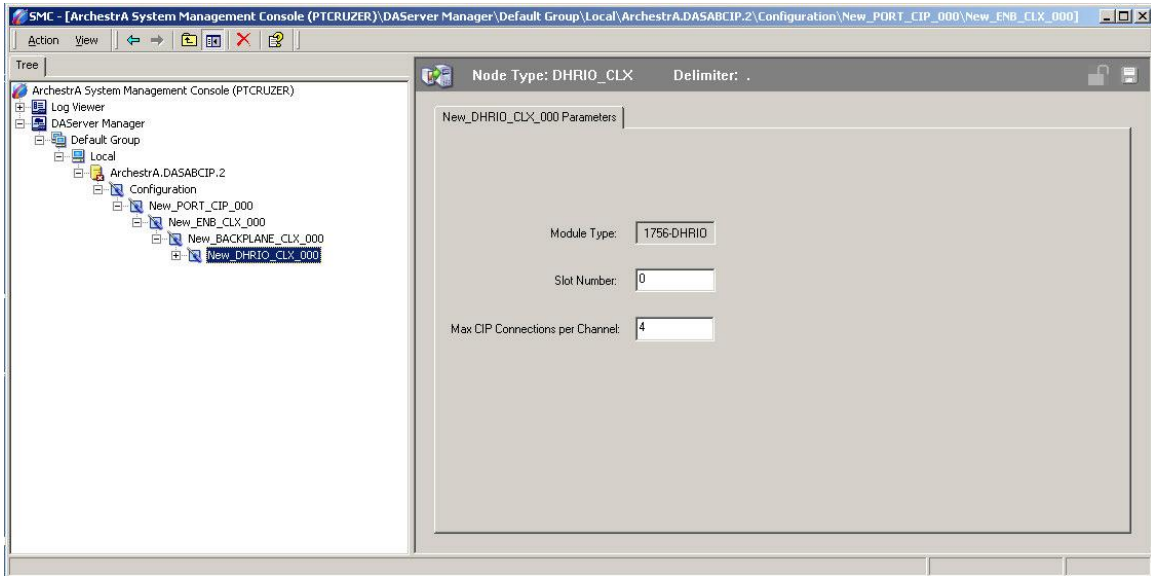


## Step 7:

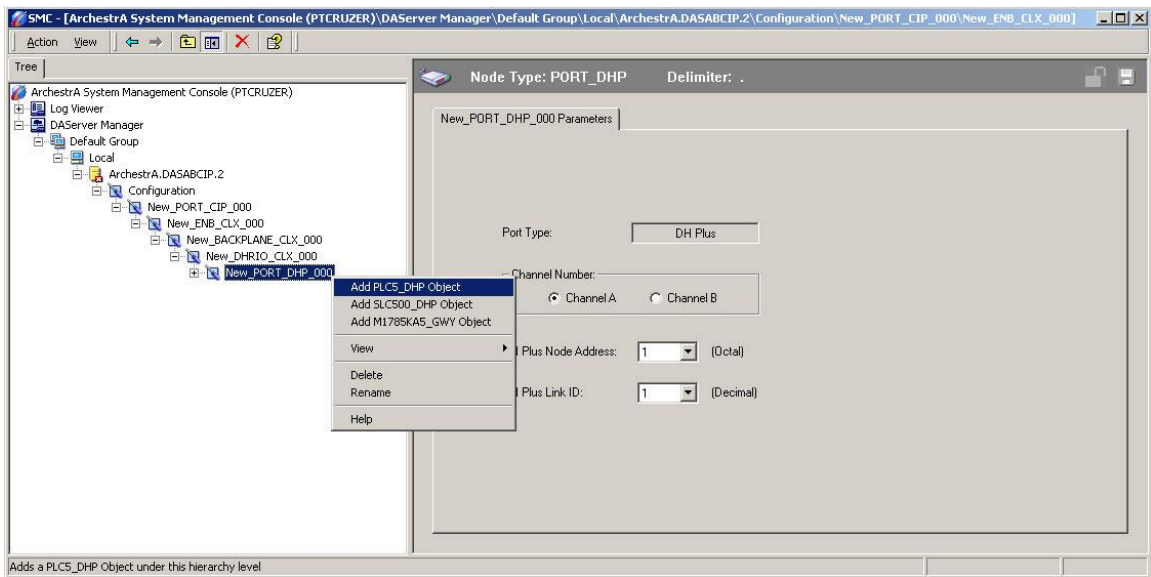


# Using AN-X-DCSNet with the Wonderware ABCIP DAServer

Step 8:

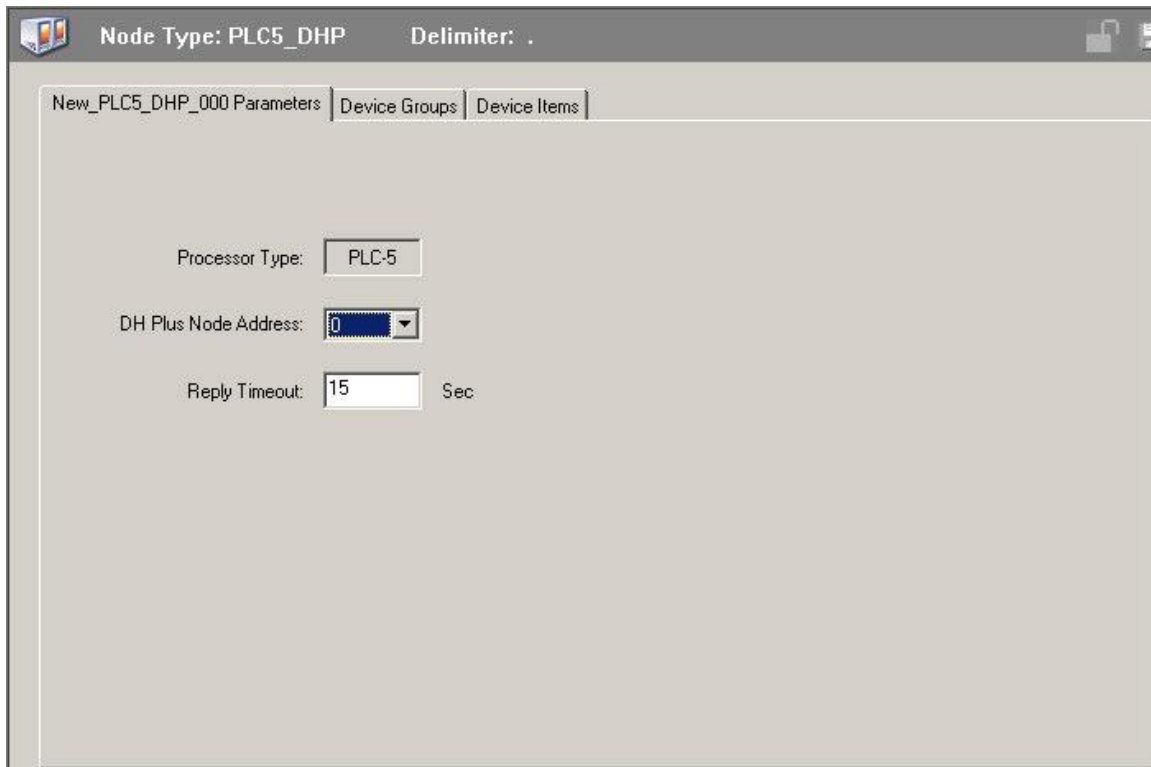

Step 9:

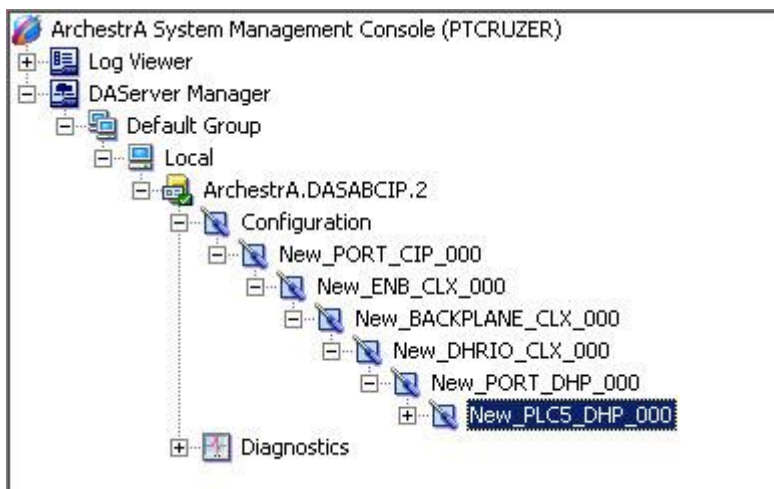

# Using AN-X-DCSNet with the Wonderware ABCIP DAServer

---

Step 10:

Name	Update Interval (ms)
Drop01	300
Drop02	1000
Drop03	1000
Drop04	1000
Drop05	1000

Quest Technical Solutions  
4110 Mourning Dove Court  
Melbourne FL 32934  
321 757-8483  
[www.qtsi.biz](http://www.qtsi.biz)

