



**Where
Automation
Connects.**

Technical Note



Red Lion DSPLE to SLC5/04 using an AN-X2-AB-DHRIO

Document Code: TN220723-002

Author: Daniel Roslan

Date: 7 2018

Asia Pacific

Malaysia Office

Phone: +603.7724.2080

asiapc@prosoft-technology.com

Languages spoken: Chinese, English

China Office

Phone: +86.21.5187.7337

asiapc@prosoft-technology.com

Languages spoken: Chinese, English

Europe, Middle East, Africa

France Office

Phone: +33 (0)5.34.36.87.20

europe@prosoft-technology.com

Languages spoken: French, English

Middle East and Africa

Phone: +971.(0)4.214.6911

mea@prosoft-technology.com

Languages spoken: English, Hindi

North America

Corporate Headquarters

Phone: +1 661.716.5100

support@prosoft-technology.com

Languages spoken: English, Spanish

Latin America

Brazil Office

Phone: +55.11.5083.3776

brasil@prosoft-technology.com

Languages spoken: Portuguese, English

Mexico and Central America Office

Phone: +52.222.3.99.6565

soporte@prosoft-technology.com

Languages spoken: Spanish, English

Regional Office

Phone: +1.281.298.9109

latinam@prosoft-technology.com

Languages spoken: Spanish, English

Document Information

Author	Daniel Roslan
Description	How to use Crimson 3.0 to set up an EtherNet/IP Red Lion DSPLE to talk to a SLC5/04 through an AN-X2-AB-DHRIO using the DH+ firmware
Date	7/2018
Revision	1.00
Product Name	AN-X2-AB-DHRIO
Document Code	TN220723-002

ProSoft Technology

9201 Camino Media, Suite 200

Bakersfield, CA 93311

+1 (661) 716-5100

+1 (661) 716-5101 (Fax)

<http://www.prosoft-technology.com>

Copyright © ProSoft Technology Incorporated 2016. All Rights Reserved.

All ProSoft Technology® products are backed with unlimited technical support.

July 23, 2018

ProSoft Technology® is a Registered Trademark of ProSoft Technology, Inc. All other brand or product names are or may be trademarks of, and are used to identify products and services of, their respective owners.

Purpose of Tech Note:

This Tech Note has been designed to assist customers who are attempting to connect a Red Lion HMI Data Station Plus using EtherNet/IP to a SLC5/04 using Data Highway Plus via an AN-X2-AB-DHRIO gateway. For the purpose of this tech note we will be using a DSPLE specifically, and will be converting data to Modbus TCP/IP, but the same process on the EtherNet/IP side should work regardless of the protocol on the other end. This tech note assumes that your SLC5/04 has already been configured with data you wish to extract or write to, and that you have at least moderate knowledge of how to use Red Lion's Crimson 3.0 software. For the sake of an example, a value of 42 has been put into a SLC5/04s N7:0 data file to be extracted by a Red Lion DSPLE through our AN-X2-AB-DHRIO and transferred to a PC running Wintek's ModSim32.

Required Components:

To complete this tech note you will need at least one of the following:


- An AN-X2-AB-DHRIO
- A Red Lion Data Station Plus with EtherNet/IP capability
- A SLC5/04
- A cat 5 (or similar Ethernet) cable
- A DH+ cable (Blue Hose)
- Red Lion's Crimson 3.0 software
- A configuration cable for the Red Lion DSPLE (a USB cable was used in screen shots)

Step 1: Setting up the AN-X2-AB-DHRIO

This tech note assumes that you have already configured the IP address for your AN-X2-AB-DHRIO to one you can reach from your PC. If you have not yet configured the IP address please refer to the user manual or watch one of the many AN-X2-AB-DHRIO tutorial videos which discusses how this can be done.


Enter the IP Address of your AN-X2-AB-DHRIO into your preferred web browser. If your AN-X2-AB-DHRIO is already in DH+ mode, you will see AN-X-DHP on the browser tab, as well as an Automation Network which, when expanded, will appear as below.

If you are in AN-X-DHP mode but do not see *Configure DH+ HMI IP Alias* and *View IP Alias File*, you have an older revision of the DH+ firmware. Please contact ProSoft Technical Support for directions on upgrading your firmware.

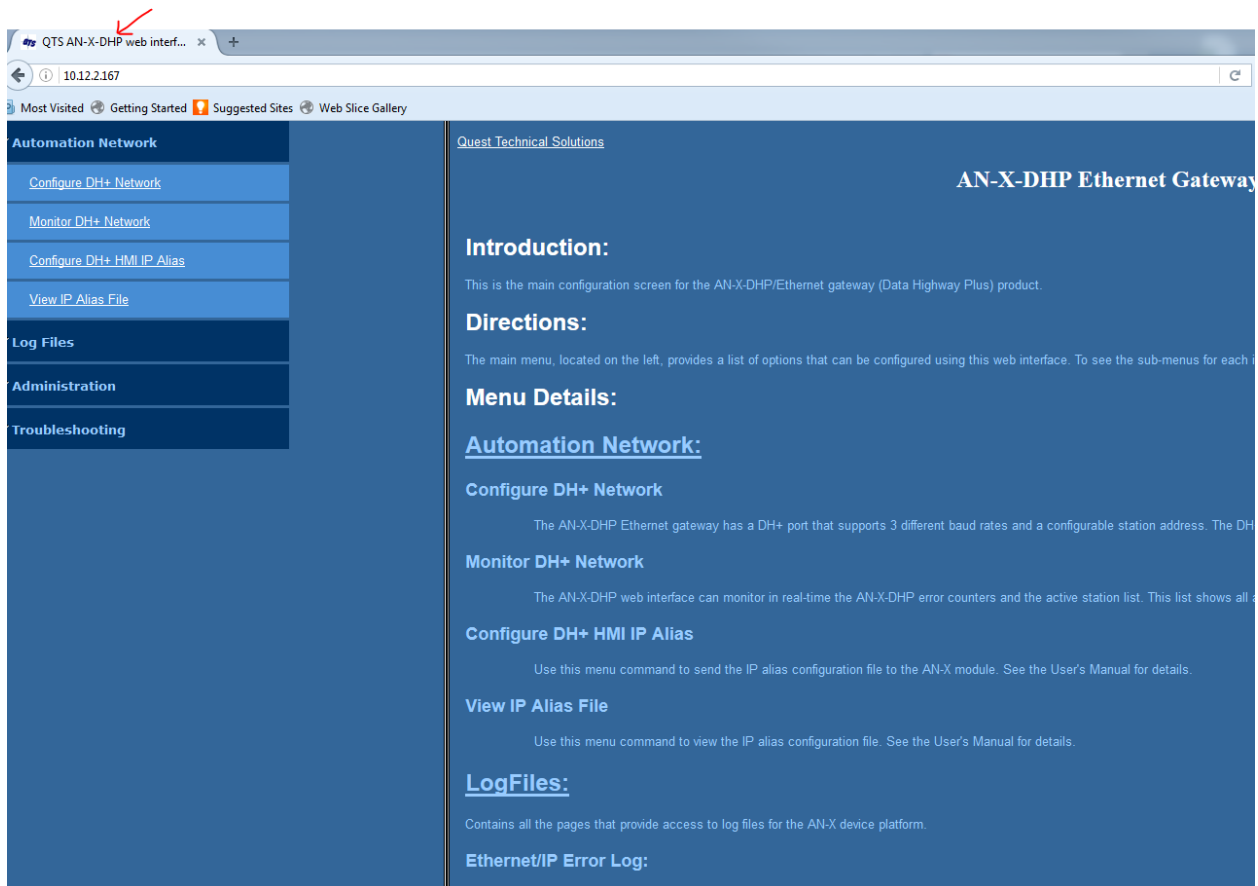

If you are already in DH+ mode you can skip to page 6.

In the event you are not in DHP mode you can activate this mode by expanding the administration tab, clicking on AN-X Configuration, selecting AN-X2-AB-DHP from the drop down, and then clicking submit.

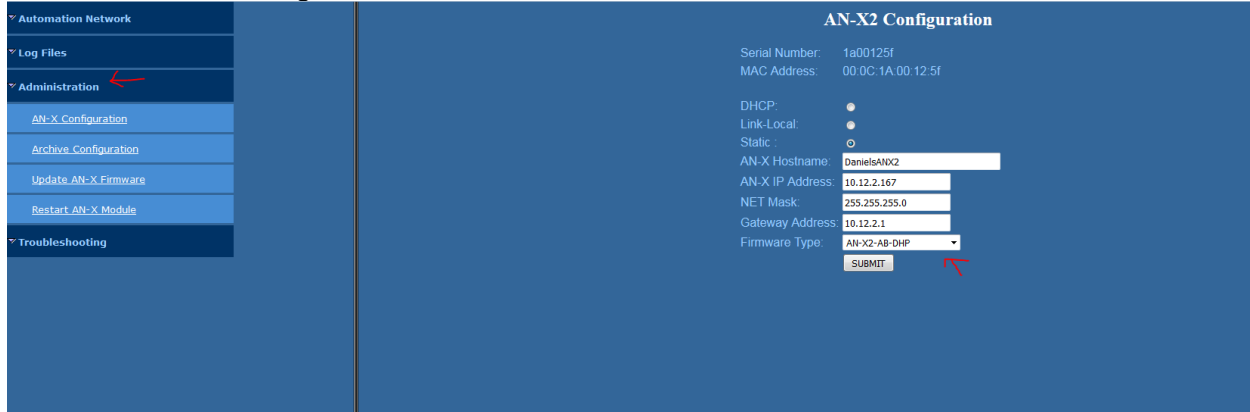

A module reboot will be required after performing this action which usually takes about a minute to complete.



After the module has finished rebooting be certain to flush your browser's cache. (Ctrl-F5 will reload pages in Firefox or Internet Explorer, Shift-F5 will reload pages in Google Chrome.)




Once you are in DH+ mode, expand the Automation Network section and click on Configure DH+ Network, then choose the baud rate settings for your network and a Station number which is not already in use on your network and click submit.



In this example the SLC5/04 was using 57k and Station 1, and there was nothing else on the network so we chose 57k and Station 2.

Next, wire the AN-X2-AB-DHRIO into your DH+ network (or directly to the SLC5/04 if that is the only device on the network, as was the case in this example). Your wiring should look similar to this:

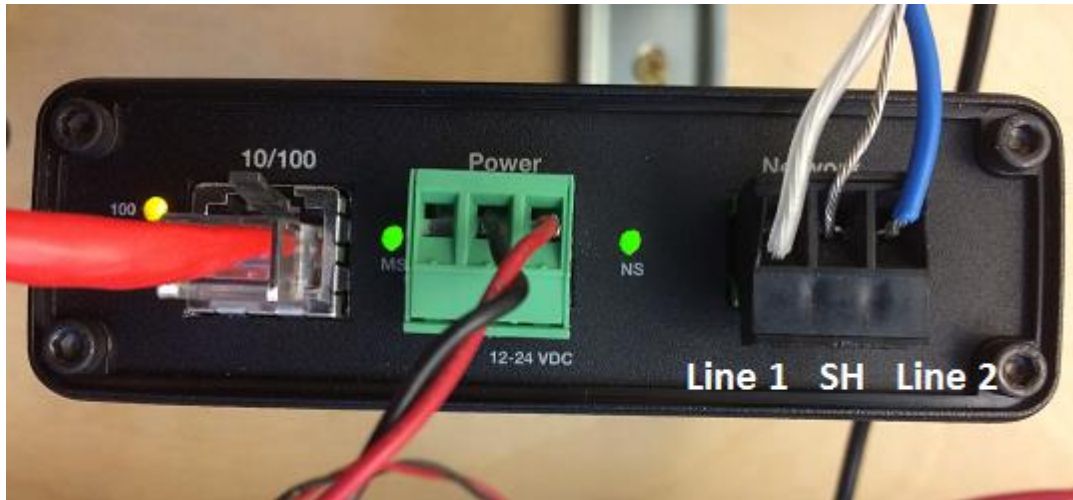


If we are at the end of the network, add proper termination for your baud rate.


The picture above matches the SLC wiring below, that is, if the clear wire is on the top pin for the SLC5/04, connect it to the pin closest to the power on the AN-X2-AB-DHRIO.



If everything has been configured and wired correctly your NS light between the power and the DH+ cable on the AN-X2-AB-DHRIO should turn green as seen on the previous page. If you go to go to Monitor DH+ Network under Automation Network you should also now see both station ID's in the station list:

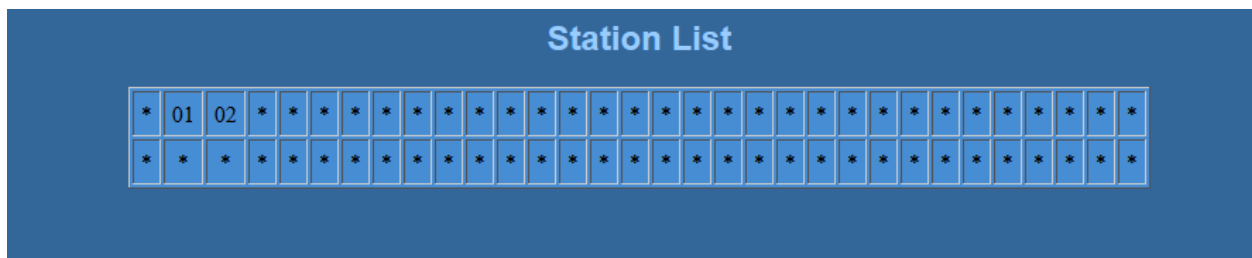

In RSLinx, you should see both stations in the AN-X2-ABDHP, CH A under the EtherNet/IP driver.

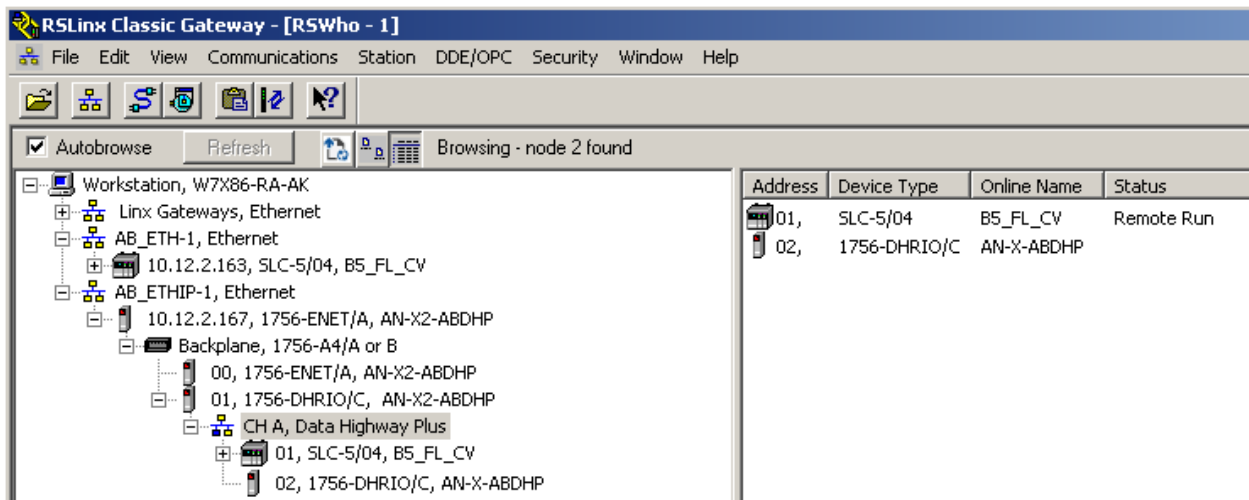


If the NS light does not turn green:

- 1) Double check that you have proper termination in place (even if the network seemed to work before).
- 2) If the light turns red, ensure that the outer braded shield has been grounded, and only grounded in one place, as this suggests there may be noise on the line.
- 3) If the light is amber, we are not seeing any communication on the network at all. Try swapping the polarity of the cable wiring on one end, and revalidate that we have the correct baud rate.


If both the AN-X2-AB-DHRIO and the SLC5/04's Station do not appear in this list, please contact Technical support for trouble shooting assistance.

Now let's create/edit the IP Alias File for the AN-X2-AB-DHRIO. If you click on View IP Alias File under Automation Network you can view (but not edit) the current IP Alias file the AN-X2-AB-DHRIO is using. Every line that begins with a semi colon (;) is only a comment and is not being executed. Copy and paste whatever field you have here into a text editor (notepad will suffice in a pinch) and edit the IP and station to match an unused IP on your network and the station of the SLC5/04. In this case 10.12.2.163 was available and my SLC5/04 was station 1. Note, you must keep the x.x.x at the beginning. (The ANX will automatically replace x.x.x with its first 3 IP octets.) You are only defining the fourth and final octet. This Alias IP is associated with the SLC DH+ station ID.

```
AliasIP x.x.x.163 -> Dhp 0o01
```

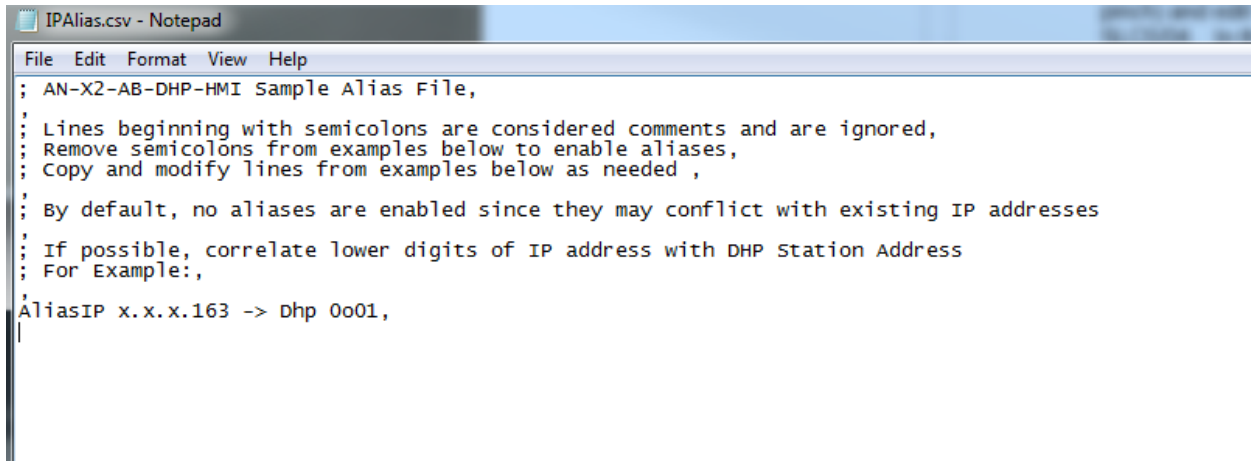

Save the file as IPAlias.csv, then use Configure DH+ HMI IP Alias to browse to the file and click Send File to AN-X.

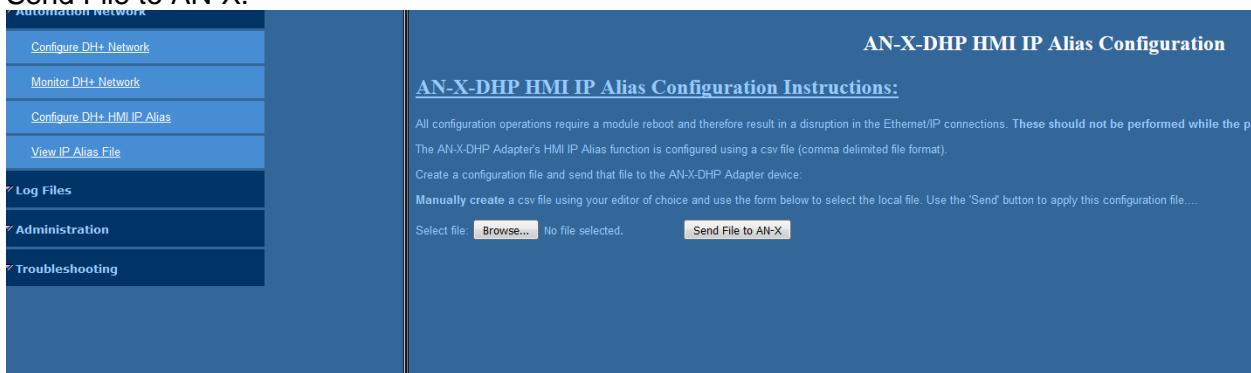

Note that you will need to reboot the AN-X2-AB-DHRIO for the change to take effect:

IPAlias.csv (460 bytes, text/csv) saved.
Updating files ...
File transfer done...

```
; AN-X2-AB-DHP-HMI Sample Alias File,
;
; Lines beginning with semicolons are considered comments and are ignored,
; Remove semicolons from examples below to enable aliases,
; Copy and modify lines from examples below as needed ,
;
; By default, no aliases are enabled since they may conflict with existing IP addresses
;
; If possible, correlate lower digits of IP address with DHP Station Address
; For Example:,
AliasIP x.x.x.163 -> Dhp 0o01,
```


Changes to the IP Alias configuration will only take effect after a reset of the AN-X device.

Click this [reboot](#) link to reset or this [link](#) to go to main page.

If you click View IP Alias File you should now see your new file:

Automation Network	<pre>File: /mnt/mmc/IPAlias.csv Length: 460 bytes [Select new file] ; AN-X2-AB-DHP-HMI Sample Alias File, ; ; Lines beginning with semicolons are considered comments and are ignored, ; Remove semicolons from examples below to enable aliases, ; Copy and modify lines from examples below as needed , ; ; By default, no aliases are enabled since they may conflict with existing IP addresses ; ; If possible, correlate lower digits of IP address with <u>DHP</u> Station Address ; For Example:, <u>AliasIP</u> x.x.x.163 -> <u>Dhp</u> 0o01,</pre>
Configure DH+ Network	
Monitor DH+ Network	
Configure DH+ HMI IP Alias	
View IP Alias File	
Log Files	
Administration	
Troubleshooting	

Although not required, you can validate that the alias file took by pinging the IP address from a command prompt:

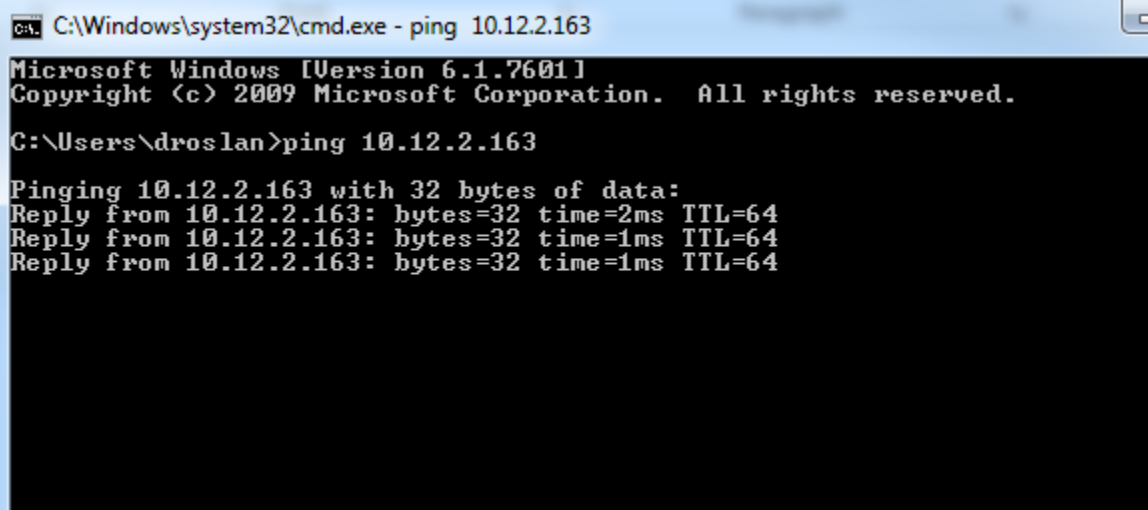

```
C:\Windows\system32\cmd.exe - ping 10.12.2.163
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.


C:\Users\droslan>ping 10.12.2.163

Pinging 10.12.2.163 with 32 bytes of data:
Reply from 10.12.2.163: bytes=32 time=2ms TTL=64
Reply from 10.12.2.163: bytes=32 time=1ms TTL=64
Reply from 10.12.2.163: bytes=32 time=1ms TTL=64
```


Your AN-X2-AB-DHRIO should now be configured and ready for your Red Lion Data Station Plus.

Step 2: Setting up the Red Lion Data Station Plus


Please make sure to correctly wire your Red Lion Data Station Plus for power and communication. Connect the appropriate configuration cable to both your DSP and PC, and select that configuration cable type for use in the Crimson 3.0 software. In this example we connected the Red Lion DSPLE to our PC with a USB configuration cable, then went to Link -> Options and selected the USB radio button and hit okay:

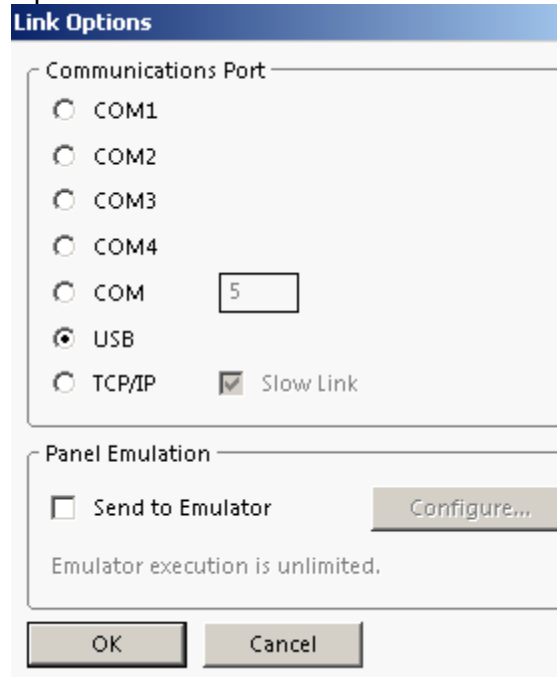

Choose the Communications tab on the navigation pane and select an unused Protocol under Network to configure the driver. When configuring the driver in Crimson 3.0 make certain that you choose the Allen-Bradley DF1 Master driver.

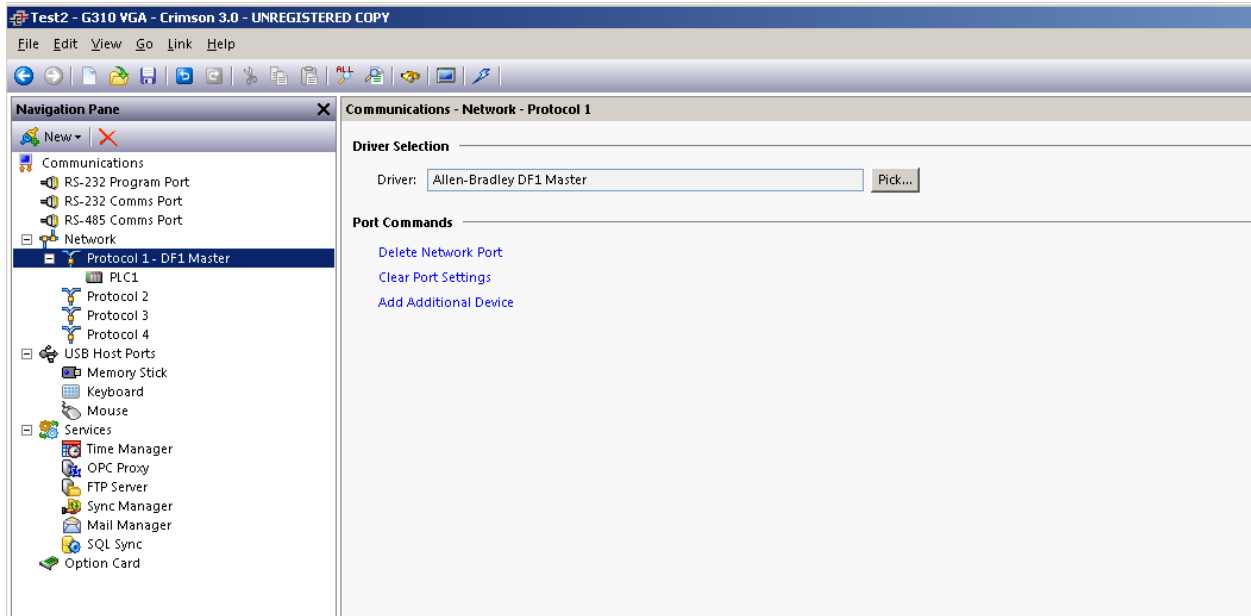

Next click on the PLC you have created. Make sure the device is both enabled and that the device is set to SLC, then set the IP Address to whichever **Alias IP** address you defined for the SLC's station in the previous steps. In this case, we used 10.12.2.163. For the sake of this example we left all other settings on this screen default.

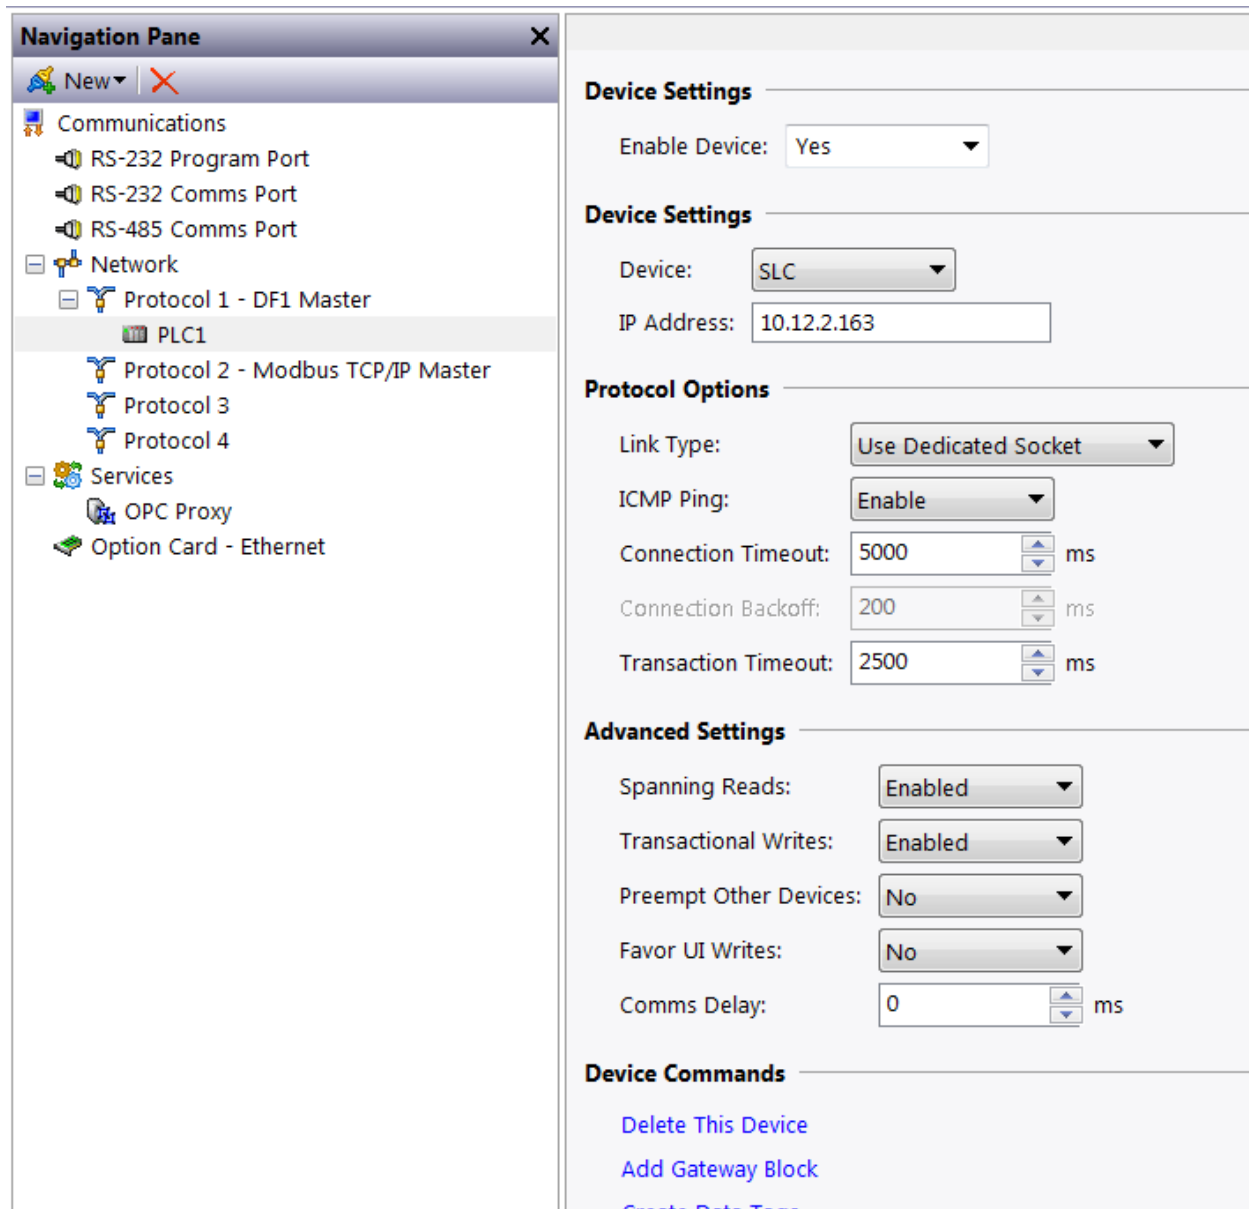


The screenshot displays the configuration window for a PLC device. On the left is a 'Navigation Pane' with a tree view containing the following items:

- New
- Communications
 - RS-232 Program Port
 - RS-232 Comms Port
 - RS-485 Comms Port
- Network
 - Protocol 1 - DF1 Master
 - PLC1** (selected)
 - Protocol 2 - Modbus TCP/IP Master
 - Protocol 3
 - Protocol 4
- Services
 - OPC Proxy
 - Option Card - Ethernet


The main configuration area is divided into several sections:

- Device Settings**: 'Enable Device' is set to 'Yes'.
- Device Settings**: 'Device' is set to 'SLC' and 'IP Address' is '10.12.2.163'.
- Protocol Options**:
 - Link Type: 'Use Dedicated Socket'
 - ICMP Ping: 'Enable'
 - Connection Timeout: '5000' ms
 - Connection Backoff: '200' ms
 - Transaction Timeout: '2500' ms
- Advanced Settings**:
 - Spanning Reads: 'Enabled'
 - Transactional Writes: 'Enabled'
 - Preempt Other Devices: 'No'
 - Favor UI Writes: 'No'
 - Comms Delay: '0' ms
- Device Commands**:
 - Delete This Device
 - Add Gateway Block
 - Create Data Tags

Next let's add a block to the protocol. To do so, in the Navigation Pane, right click on your PLC under Protocol 1 – DF1 Master (PLC1 by default) and choose Add Block from the drop down list.

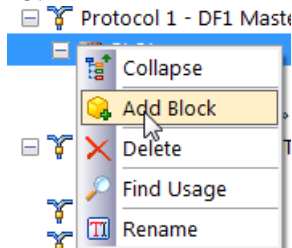


Click on the Block (Block1 by default) and then click on Pick to the right of Start Address and select the data type of the data file you want to read or write from your SLC. In this example we will be reading N7:0 so we will pick N for Integers and set the address to 007 : 0000.

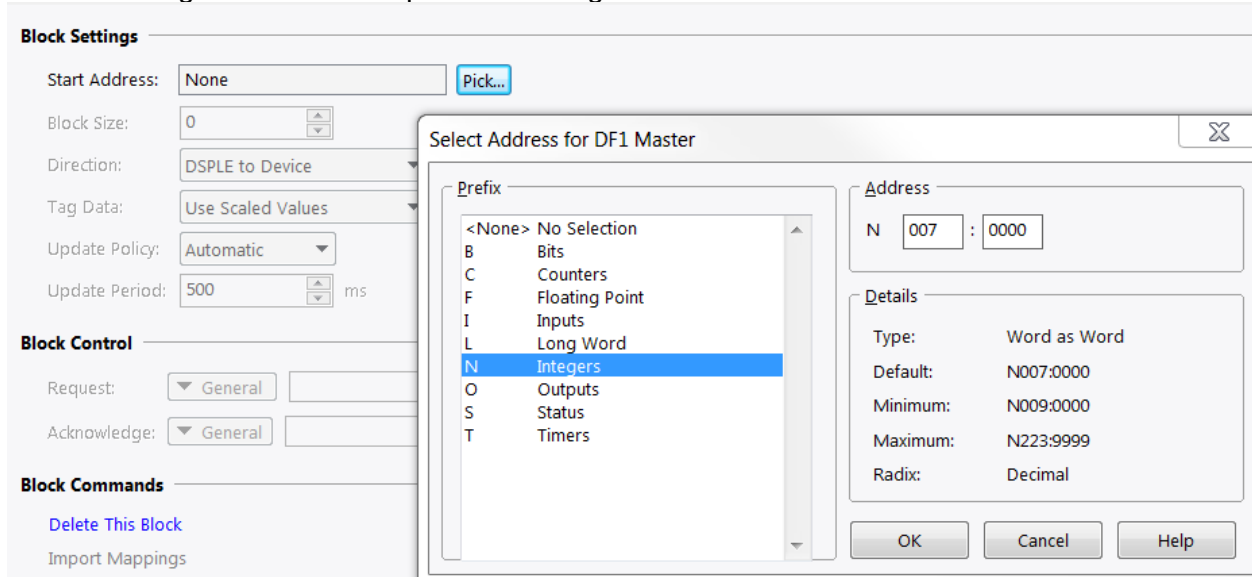

Finally make sure you have a Block Size of at least 1 and set the Direction to the direction you want data to flow. For this example we want only a single point, so we'll set the block size to 1, and we want the data to move from the SLC to the RedLion (a read) so we'll set the direction to Device to DSPLE.



At this point you've already completed the process for the SLC side of the DSPLE (just add more blocks for other points), but for the sake of seeing it in action, lets link our point to another point on another protocol. Lets say we wanted to move this point to a Modbus TCP/IP Server/Slave device, we could define the second protocol as Modbus TCP/IP Master

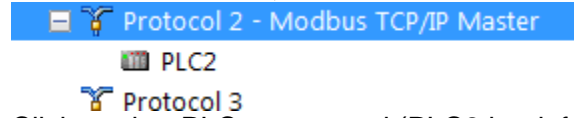

Click on that PLC we created (PLC2 by default) and enter the IP address of the Modbus TCP/IP server device.

Device Settings

Enable Device:

Device Identification

Primary IP Address:

Fallback IP Address:

TCP Port:


Unit Number:

Protocol Options


Ping Holding Register:

Ignore Read Exceptions:


Now on the Resource Pane on the right we should see points for both devices. Let's say I want to move N7:0 into Modbus Register 40,001 on this other device, I can drag and drop the Holding Registers under the PLC2 in the Resource ...

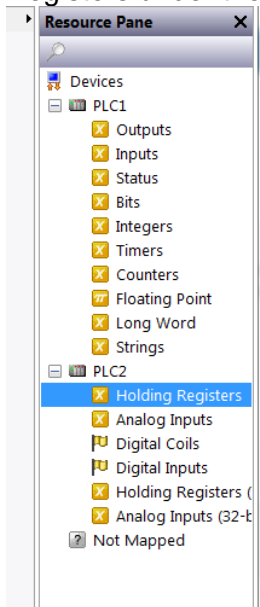


... to the N007:0000 data point under my block in the Navigation Pane:

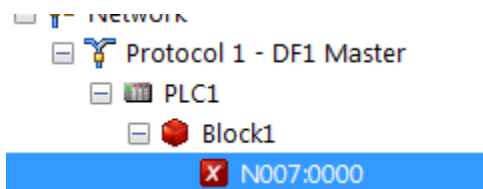


Doing so will open a window which will allow me to decide which specific holding register to map the point to and if I'll be mapping word or word, or some other conversion. I just want it in 40,001 in this example and word to word, so I'll choose that:

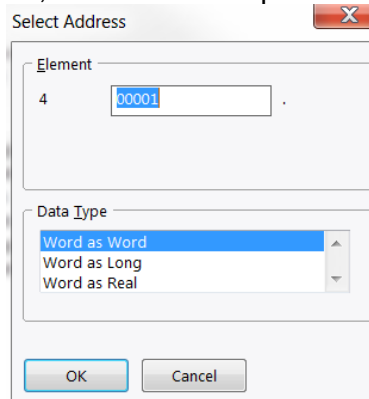

Next I'll enter the number of consecutive Registers to Map. Again, in this example I just want one so I'll select that:

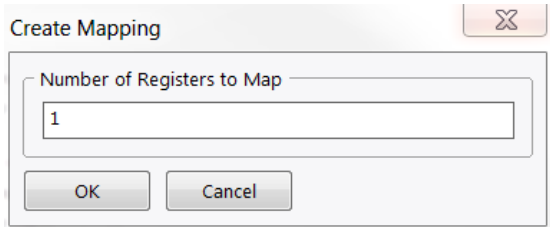

And we're done, the points have been mapped. All that remains is to download the configuration to the Red Lion.

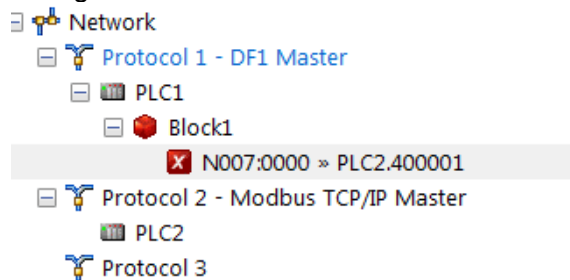


To do so go to Link along the top and choose Send.



Once complete I can put a value into N7:0 in my SLC

Data File N7 (dec) -- INTEGER			
Offset	0	1	2
N7:0	42	2	3
N7:10	0	0	0
N7:20	0	0	0

And sure enough, there it is in my Modbus Server

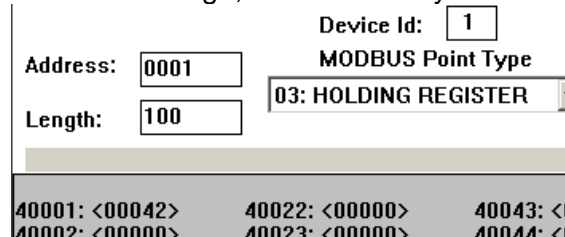

If you have any other questions about this, or any other use of the AN-X2-AB-DHRIO, please contact your local Prosoft Technical Support Office!

Asia Pacific

Malaysia Office

Phone: +603.7724.2080

asiapc@prosoft-technology.com

Languages spoken: Chinese, English

China Office

Phone: +86.21.5187.7337

asiapc@prosoft-technology.com

Languages spoken: Chinese, English

Europe

France Office

Phone: +33 (0)5.34.36.87.20

support.emea@prosoft-technology.com

Languages spoken: French, English

Middle East and Africa

Phone: +971.(0)4.214.6911

mea@prosoft-technology.com

Languages spoken: English, Hindi

North America

California and Wisconsin Offices

Phone: +1 661.716.5100

support@prosoft-technology.com

Languages spoken: English, Spanish

Latin America

Brazil Office

Phone: +55.11.5083.3776

brasil@prosoft-technology.com

Languages spoken: Portuguese, English

Mexico and Central America Office

Phone: +52.222.3.99.6565

soporte@prosoft-technology.com

Languages spoken: Spanish, English

Regional Office

Phone: +1.281.298.9109

latinam@prosoft-technology.com

Languages spoken: Spanish, English